

*Learn With Pokémon: Typing Adventure*

UK Region Keyboard

Key Combination Lists

**Shift + 1 = !**

**Shift + 2 = @**

**Shift + 3 = £**

**Shift + 4 = \$**

**Shift + 5 = %**

**Shift + 6 = ^**

**Shift + 7 = &**

**Shift + 8 = \***

**Shift + 9 = (**

**Shift + 0 = )**

**Shift + - = \_**

**Shift + = = +**

**Shift + [ = {**

**Shift + ] = }**

**Shift + # = ~**

**Shift + ; = :**

**Shift + ' = "**

**Shift + , = <**

**Shift + . = >**

**Shift + / = ?**

**Shift + \ = |**

**AltGr + e = €**

**Fn + 1 = F1**

**Fn + 2 = F2**

**Fn + 3 = F3**

**Fn + 4 = F4**

**Fn + 5 = F5**

**Fn + 6 = F6**

**Fn + 7 = F7**

**Fn + 8 = F8**

**Fn + 9 = F9**

**Fn + 0 = F10**

**Fn + Back Space = Del**

**Fn + ` = ESC**

**Fn + → = End**

**Fn + ← = Home**

**Fn + ↓ = Page Down**

**Fn + ↑ = Page Up**

**Fn + Control = – (Decrease Volume)**

**Fn + Alt = + (Increase Volume)**

Note: This keyboard has been made to work with the software *Learn with Pokémon: Typing Adventure*. When using this keyboard with another product (hardware or software), please be aware that certain keys may function differently. For more information on some key combinations, please visit the Nintendo website.